

In order to configure the router with a static IP address, you will need the following information from your ISP:

IP address  
Subnet Mask  
Default Gateway  
Domain Name Server (DNS) addresses

Access the Router's web based utility by typing <http://192.168.1.1/> into your web browser.

A password window will appear.

Leave username blank and enter the password as **admin** (all lowercase).

Click **OK**.

Once on the Setup page, go directly to the WAN IP Address or WAN Connection Type, and change the option from **Obtain an IP address Automatically** to **Specify an IP Address**.

Enter the IP Address, Subnet Mask, Default Gateway, and DNS you retrieved from your ISP.

Scroll down and click **Apply**.

If settings are successful, click **Continue**.

The Router is now set up for use with your provider and a static IP address.